

Dainty Wallet 2 - Enlarged version

designed by Yoan Zivkovic - yoansewingstudio

www.yoansewingstudio.com; www.youtube.com/yoansewingstudio

Skill level : Advanced Beginner

©Copyright 2024 YoanSewingStudio



Supplies

fabric

Exterior Fabric : 8 1/2" x 6" (21.5 x 15.2 cm)*

Lining Fabric : 1/4 yard cotton quilting/ lightweight cotton fabric

Accent fabric (for the flap&d-ring tab) : 5 1/2"x 2" (14 x 5 cm) cork or faux leather fabric

*Suggested fabric choice (exterior) : canvas, denim, cork, faux leather.

The yardage requirements are estimated. More fabric may be needed if using directional print.

interfacing & stabilizer

1/4 yard ultra light weight interfacing; I use Pellon PLF 36 (15" wide) <https://tidd.ly/3BPWzDF>

7" x 5" (18 x 12.7 cm) mid-weight fusible stabilizer; such as decovil light, pellon 809, or pellon 808*

*You do not need stabilizer if using cork or faux leather as the exterior fabric.

hardware

1x set of button snap closure 12.5 mm <https://amzn.to/3JR3Wxl>

1/2" (1.2cm) D-ring

other

Polyester thread

Fabric glue (that works for faux leather or cork fabric)

Optional - RFID blocking fabric 8 1/2" x 6" (21.5 x 15.2 cm)

Tools

•Sewing machine, basic sewing notions, walking foot.

•Clear ruler, thin metal ruler, rotary cutter or fabric scissors, disappearing fabric marker, iron.

•Sewing machine needle size 90/14 & 100/16.

•Leather hole puncher (optional).

Cutting Instructions

Following the below chart, cut your fabric, stabilizer, and interfacing accordingly.

	Exterior Fabric	Lining Fabric	Accent Fabric
Wallet exterior/interior	Cut (1) 8 1/2" w x 6" (21.5 x 15.2 cm)	Cut (1) 8 1/2" w x 6" h (21.5 x 15.2 cm)	
Card Pocket 1,2		Cut (2) 3 1/4" w x 24 1/2" (8.3 x 62.2 cm)	
Pocket Side Panel, Pocket Binding		Cut (4) 1 1/2" w x 6" h (3.8 x 15.2 cm)	
Pocket Lining		Cut (2) 4" w x 6" h (10 x 15.2 cm)	
Button Flap			Cut (1) 1 1/4" x 5 1/2" (3.2 x 14 cm)
D-ring tab			Cut (1) 2" x 1/2" (5 x 1.2 cm)

Stabilizer (for wallet interior)	Cut (1) 7" x 5" (18 x 12.7cm) *no need for stabilizer if you use cork or faux leather as the exterior fabric
Lightweight interfacing (for pocket 1,2)	Cut (2) 2" x 23" (5 x 58cm)
RFID blocking fabric (optional)	Cut (1) 8 1/2" w x 6" (21.5 x 15.2 cm)

Finished wallet measurements

4 3/4" wide x 5 1/4" tall
(12 x 13.3cm)

Features

6x card slots

2x compartments

Button snap closure

D-ring tab


Slim + compact

watch the video tutorial
<https://youtu.be/CWp131IEz8>


Directions

Seam allowances are $3/8"$ (1cm) unless otherwise stated.
Please watch the Full Video Tutorial for thorough demonstration.

1. Fuse the lightweight interfacing on the wrong side of pocket 1 & 2 panel (center the position)
2. Fuse the stabilizer on the wrong side of wallet interior panel (center the position).
*no need for stabilizer if you use cork or faux leather fabric as the wallet exterior.
3. Make the Button flap, set aside.
4. Make the d-ring tab, set aside.
5. Following the below diagram, draw the folding lines for the card slots on the wrong side of pocket panel 1 & 2.

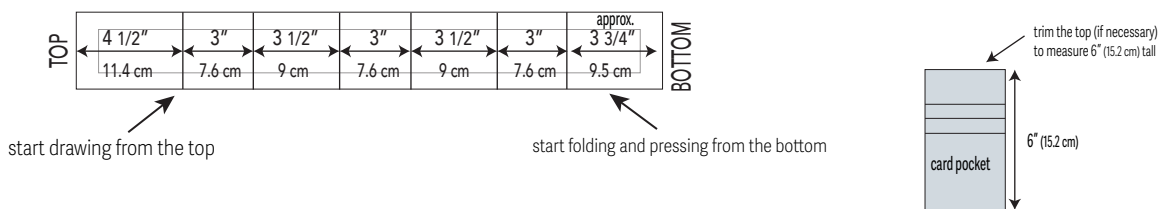


6. Fold and press Pocket 1 panel to create the card slots (start folding from the bottom to top).
7. Trim the top edge of the card pocket panel so that it will measure $6"$ (15.2 cm) tall.
Repeat to fold and press the remaining pocket panel.
8. Sew one side panel to the *left side of pocket 1*.
9. Sew the remaining side panel to the *right side of pocket 2*.
10. With the wrong sides facing sew one pocket lining and Pocket 1 together with $1/4"$ (6mm) seam allowance. Repeat to sew the remaining pocket lining and Pocket 2.

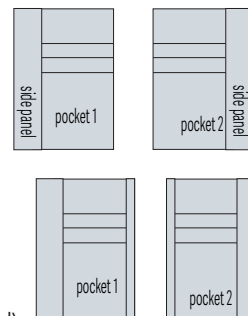

11. Bind the *right edge* of Pocket 1.
12. Bind the *left edge* of Pocket 2.
13. Attach pocket 1 & 2 on the right side of the wallet interior panel.
(Pocket 1 on the left, Pocket 2 on the right).
14. Install the button flap about $1\ 1/2"$ (3.8cm) from the left edge of the wallet exterior (centered).
15. Install the male button about $1\ 1/4"$ (3.2cm) from the right edge of the wallet exterior (centered).

Please watch the video tutorial thoroughly for visual presentation, and to avoid any confusion.

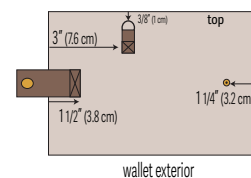

16. Install the female button about $3/8"$ from the front edge of the flap
17. Install the d-ring tab about $3"$ (7.6cm) from the left edge, $3/8"$ (1cm) below the top of the wallet exterior.
18. (Optional) sew the RFID blocking fabric on the wrong side of the wallet exterior with $1/4"$ (6mm) seam allowance.
19. With the right sides facing, sew the wallet exterior and the wallet interior with $3/8"$ (1cm) seam allowance.
Leave an opening at the bottom part of the wallet, about $4"$ (10 cm).
20. Trim off the seam allowances of the top and sides of the wallet. Do not trim the seam allowances of the bottom.
21. Turn the wallet inside out through the opening hole.
22. Fold the raw edges of the opening hole towards the wrong side about $3/8"$ (1 cm), pin to secure the fold.
23. Topstitch all around, and your wallet is done.

watch the video tutorial
<https://youtu.be/CWp131IEz8>

Terms of use : You may sell the wallet that you make with this pattern. Permission to sell the finished product is given for small scale home based handmade business.