

Dewy Crossbody Bag Project

www.yoansewingstudio.com

www.youtube.com/yoansewingstudio

©Copyright 2021 Yoan Sewing Studio



Supplies

Main Fabric : 5/6 yard

Lining Fabric : 5/8 yard

Note: yardage requirements are based on standard 44" wide cotton quilting fabric

Suggested fabric : cotton quilting, canvas, linen, denim

24 "x 26" (61 x 66 cm) Fusible Fleece (I use Pellon TP971F) <https://amzn.to/2Zj8wQu>

1/2 yard (20" wide) fusible woven interfacing - Pellon SF 101 <https://amzn.to/346atRJ>

(2) all purpose zipper 1" (2.5cm) wide at least 14" (35.6 cm) long* <https://amzn.to/3s3dE6Y>

(2) 1 1/2" (38 mm) diameter o-rings <https://amzn.to/2ZQ553g>

1" (25mm) Adjustable Strap Adjuster <https://amzn.to/37mvMQF>

1 set of magnetic snap closure

Basting Tape

Note: 1" d-rings may be used instead of o-rings

Tools

Basic sewing notions

Walking foot

Hera Marker (optional)

Polyester thread

Note: This post may contain affiliate links; I may earn a small percentage of commission when you make a purchase of qualifying items through any of those links with no additional charge. Thank you for your support!

watch the video tutorial :
<https://youtu.be/KnoxsjU3III>

Finished bag measurements :

Approx. 11" x 11 1/2" x 3" (28 x 29.2 x 7.6 cm)

Abbreviation

MF : Main Fabric

LF : Lining Fabric

FWI : Fusible woven interfacing

FF : Fusible Fleece



main fabric
(MF)



lining fabric
(LF)



fusible woven
interfacing
(FWI)




fusible fleece
(FF)

Cutting


Front & Back Exterior

Cut 2x from the MF : 13" x 14" (33 x 35.6 cm)

Cut 2x from the FF : 12" x 13" (30.5 x 33 cm)

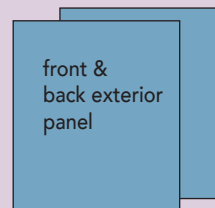

front &
back exterior
panel

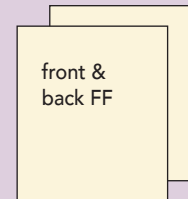


front &
back FF

Front Exterior Pocket

Panel 1

Cut 1x from the MF : 13" x 2 1/2" (33 x 6.4 cm)


Cut 1x from the FWI : 12" x 2 1/2" (30.5 x 6.4 cm)

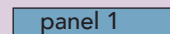

panel 1



panel 1 FWI

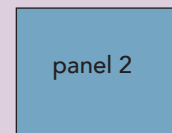

panel 2



panel 2
FWI

Panel 2

Cut 1x from the MF : 13" x 8" (33 x 20.3 cm)

Cut 1x from the FWI : 12" x 8" (30.5 x 20.3 cm)



panel 3



panel 4

Panel 3

Cut 1x from the LF : 13" x 12" (33 x 30.5 cm)

Panel 4

Cut 1x from the MF : 13" x 10 1/2" (33 x 26.7 cm)

watch the video tutorial : <https://youtu.be/KnoxsjU3III>

Front & Back Interior

Panel 1



Cut 2x from the MF : 13" x 2 1/2" (33 x 6.4 cm)

Cut 2x from the FWI : 12" x 2 1/2" (30.5 x 6.4 cm)



Panel 2

Cut 2x from the LF : 13" x 12" (33 x 30.5 cm)

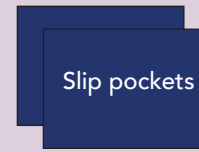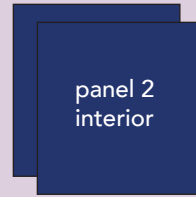


Interior Slip Pockets

Cut 2x from the LF 13" x 7" (33 x 17.8 cm)

Zipper Panels

Cut 2x from the MF : 12" x 2 1/2" (30.5 x 6.4 cm)

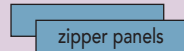

Zipper Tab

Cut 1x from the MF : 3" x 2" (7.6 x 5 cm)



Ring Tabs

Cut 1x from the MF : 5" x 4" (12.7 x 10 cm)





watch the video tutorial : <https://youtu.be/KnoxsjU3III>

Adjustable Strap

Cut from the MF : 55" x 4" (140 x 10cm)

Cut from the FWI : 54" x 2" (137 x 5 cm)

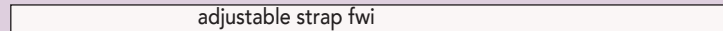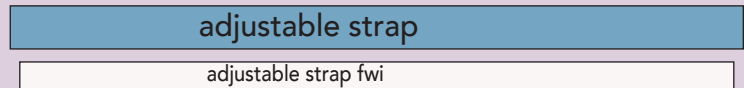


Notes :

- If using 44" wide fabric, join two fabric strips together to get a sufficient length
- Cut the FWI in few shorter pieces, then fuse them next to each other

Directions

(these are brief directions, please refer to the video tutorial for more detailed demonstrations)

1. Apply FWI to the following : Panel 1 & 2 exterior pocket, panel 1 (interior), adjustable strap.
2. Apply FF to the Front & Back exterior panels.
3. Cut 1 1/2" (3.8 cm) square notches at the bottom corners of the following : Panel 2 & 4 exterior pocket, Front & back exterior, panel 2 interior.

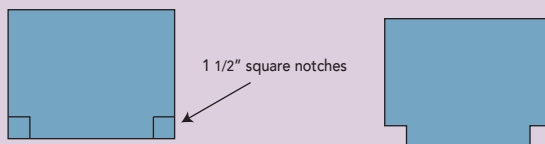

4. Sew and install the front zipper pocket.
5. Install the front slip pocket magnetic snap closure.
6. Assemble the bag exterior; use 1/2" (1.2cm) seam allowance
7. Sew the ring tabs, install the ring tabs and the o-rings to the top sides of the bag exterior.
8. Sew the strap, set aside.
9. Sew panel 1&2 interior panels right sides together, with 1/4" (6mm) of seam allowance, topstitch.
10. Sew and install the zipper panels to the zipper closure.
11. Install the zipper tab to the end of the zipper.
12. Install the zipper to the bag interior.
13. Assemble the bag interior (remember to leave an opening at the bottom part).
14. Turn the bag inside out through the opening.
15. Topstitch, then sew the opening hole close.
16. Install the adjustable strap, and you are done.

Enjoy your new bag!