

Duo Bifold Wallet Project

www.yoansewingstudio.com

www.youtube.com/yoansewingstudio

©Copyright 2021 Yoan Sewing Studio



LARGE WALLET


Supplies

Fabric A : 3/8 yard

Fabric B : 1/2 yard

*based on regular 44" wide cotton quilting fabric

*recommended fabric : cotton quilting, flannel, canvas, light-medium weight linen

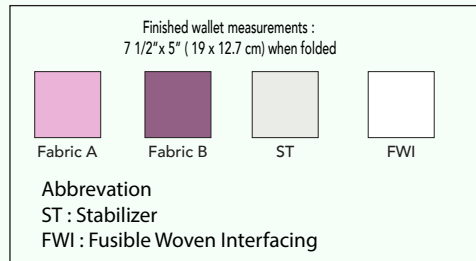

10" x 10" (25.4 x 25.4 cm) firm stabilizer or medium-heavy interfacing such as decovil light, craft fuse, or decor bond.

1/3 yard fusible woven interfacing (20" wide)

1 set of button snap closure (12.5mm preferably) or 1 set of magnetic snap closure (14 mm)

1 all purpose zipper/ #3 zipper; 1" (2.5 cm) wide, at least 9" (23cm) long

1/2" cotton twill tape cut 2x 1 1/2" (3.8 cm) long each

2x d-rings 1/2" (12mm) inner measurement

2x swivel hooks 1/2" (12mm) inner measurement (if opt wristlet strap you will need 1x extra swivel hook)

1x adjustable strap slider 1/2" (12mm) inner measurement.

Tools

Basic sewing notions

Polyester thread

Walking foot

watch the video tutorial :

<https://youtu.be/kdhlRn5FowE>

Cutting

Panel 1 (wallet exterior)

Cut 1x from Fabric A : 8 1/2" x 11 (21.6 x 28 cm)

Cut 1x from ST : 7 1/2" x 10" (19 x 25.4 cm)

Panel 2 (wallet interior)

Cut 1x from Fabric A : 8 1/2" x 11 (21.6 x 28 cm)

Cut 1x from FWI : 7 1/2" x 10" (19 x 25.4 cm)

Panel 3 (card pockets)

Cut 2x from Fabric B : 3 1" x 3" (78.7 x 7.6 cm)

Cut 2x from FWI : 29" x 2" (73.6 x 5 cm)

Panel 4 (pocket, long sides)

Cut 4x from fabric A : 6 1/2" x 1 1/2" (16.5 x 3.8 cm)






Panel 5 (pocket, short sides)

Cut 4x from fabric A : 5" x 1 1/2" (12.8 x 3.8 cm)

Panel 6 (pocket, lining)

Cut 2x from fabric A : 8 1/2" x 5" (21.6 x 12.8 cm)

Cut 2x from FWI : 7 1/2" x 4" (19 x 10 cm)

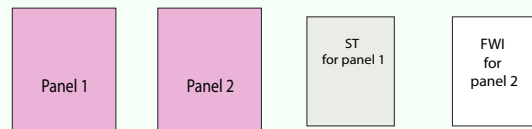

watch the video tutorial :

<https://youtu.be/kdhlRn5FowE>

Panel 7 (lining)


Cut 2x from Fabric B : 8 1/2" x 11" (21.6 x 28 cm)

Button flap

Cut 1x from Fabric A : 3 1/2" x 2 1/2" (8.9 x 6.4 cm)

Cut 1x from ST : 3" x 2" (7.6 x 5cm)

Cut 1x from Fabric B : 3 1/2" x 2 1/2" (8.9 x 6.4 cm)

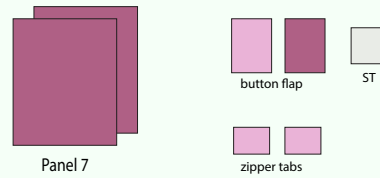

Zipper Tabs

Cut 2x from Fabric A : 2" x 1 1/2" (5 x 3.8 cm)

Adjustable Strap


Cut from fabric A : 50" x 2" (127x 5 cm)

Cut from FWI : 49" x 1" (124 x 5 cm)

Wristlet strap

Cut 1x from fabric A : 13" x 2" (33 x 5 cm)

Cut 1x from FWI : 12" x 1" (19 x 10 cm)

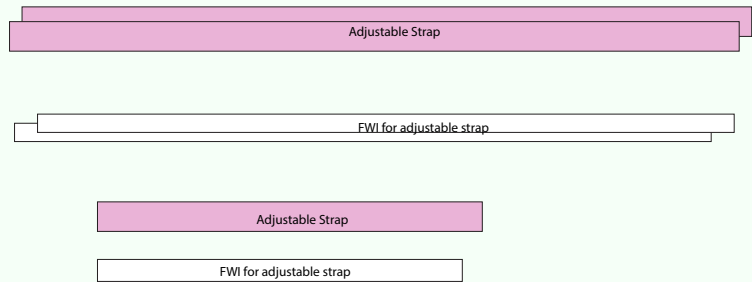

Directions

(below are brief instructions, please refer to the video tutorial for more detailed instructions)

seam allowances are 1/2" (1.2 cm) when assembling the wallet; 1/4" (6mm) (pockets, zipper, and everything else).


1. Preparation

Apply ST to the wrong side of the following : Panel 1, Button flap exterior (center the position)

Apply FWI to the wrong side of the following : Panel 2, Panel 3, Panel 6, straps (center the position)

2. Card Pocket

Following the below diagram, draw the folding lines to the wrong side of panel 3

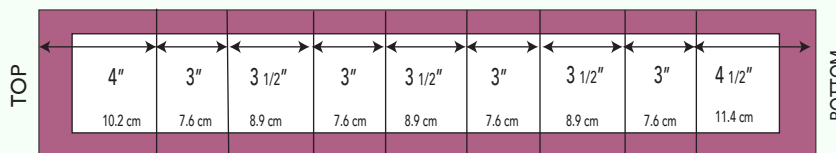


watch the video tutorial :
<https://youtu.be/kdhlRn5FowE>

3. Fold and press the folding lines starting from the bottom to create four card slots.


4. Top stitch the pleat lines, then sew the sides with 1/8" (3mm) seam allowance, to hold the pleats.

5. Trim the bottom of the card pocket panel to measure 6 1/2" (16.5 cm)


6. Sew panel 4 to the long sides of the card pocket with 1/4" (6mm) of seam allowance, press towards panel 4, topstitch.

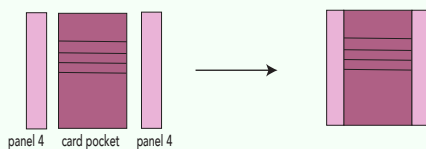

7. Sew panel 5 to the short sides of the card pocket, with 1/4" (6mm) of seam allowance, press towards panel 5, topstitch.

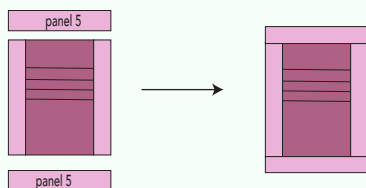

8. Attach the d-ring tabs to the pocket panels
9. With the pocket panel and panel 6 right sides together, sew the side (where the d ring tab is attached) with 1/4" (6mm) of seam allowance, press, then topstitch.
10. Sew the pocket panels to the right side of panel 2
11. Measure 1" (2.5cm) from the bottom edge of the flap interior (center the position), mark with disappearing fabric marker. Attach the male magnetic snap to the wrong side of the flap interior.
12. Sew the flap then attach it to the bottom part of panel 1.
Note : If using button snap, sew the button cap after sewing the flap.
13. Install the female magnetic snap to the right side of the upper top of panel 1. If using button snap, install the button stud.
14. Trim the zipper to measure 7 1/2" (19cm). Sew the zipper tabs.
15. Install the zipper.
16. Assemble the wallet (remember to leave an opening, and unzip your zipper), use 1/2" (1.2cm) seam allowance.
17. Turn the wallet inside out through the opening hole.
18. Sew the opening hole close, then press the wallet.
19. Referring to the below picture, draw a rectangle on the center of the wallet, then sew.

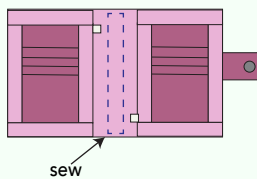

watch the video tutorial :
<https://youtu.be/kdhlRn5FowE>

20. Sew the adjustable strap
21. Sew the wristlet strap (if opt one).
22. Attach the strap, and enjoy your new wallet purse

Additional Notes :

1. ST abbreviation refers to the "stabilizer" or the medium - heavy weight interfacing (I used decovil light)
2. If using fabric with directional print, do assesment beforehand, to determine the position of the print when worn as a crossbody purse.
3. Apply a little bit of interfacing to the wrong side of the flap interior before installing the magnetic snap closure.
4. Apply a 1/2" strip of FWI to the top edges of panel 1 to stabilize the zipper area, befor sewing the zipper.
5. Always refer to the video tutorial on Youtube, to get better visual demonstration.