

The Sling Bag Project

by Yoan Zee - yoansewingstudio

www.yoansewingstudio.com | www.youtube.com/yoansewingstudio

Skill Level : Intermediate

©Copyright 2023 yoansewingstudio



Supplies

Fabric 1 : 3/8 yard cotton quilting fabric <http://bit.ly/3YeBcG6>

Fabric 2: 1/2 yard of cotton quilting fabric <https://tidd.ly/3lqhm36>

*yardage requirements are an estimate, based on 44" wide cotton quilting fabric.

1/2 yard fusible woven interfacing - Pellon SF 101 (20" wide) <https://amzn.to/3bvgtLu>

3/8 yard mid weight/firm, fusible stabilizer (e.g Pellon 808, Pellon 809, or decovil light) <https://amzn.to/3HVHR2r>

14" (35.5 cm) teeth length - metal zipper <https://tidd.ly/3Crj0k8>

Nylon coil zipper at least 6" (15cm) long <https://amzn.to/3HwltLW>

(2x) 1" (2.5cm) inner measurement d-ring <https://amzn.to/3ZiRtej>

1" (2.5cm) inner measurement swivel hook <https://amzn.to/3lqWF9Y>

1" (2.5cm) adjustable strap slider <https://amzn.to/3Cr7vg>

1" (2.5 cm) wide cotton webbing strap 55" (140cm) long <https://amzn.to/3X3QA7q>

Single fold bias tape 7/8" (22mm) wide

1x set of button snap closure 12.5 mm <https://amzn.to/3JR3Wxl>

8" (20.3 cm) long elastic - 1/4" (6mm) wide <https://amzn.to/3wUxBkN>

1/8" or 1/4" basting tape <https://amzn.to/3igu1h8>

Polyester thread

Tools

Basic sewing notions

Zipper foot

Walking foot

Pattern Weight (optional) <https://amzn.to/3wYxu82>

Leather hole puncher (optional)

watch the video tutorial
<https://youtu.be/7DUd3jMGO3A>

Finished bag measurements :
approx. 10" x 7" x 2 3/4" (25.4 x 18 x 7cm)



Fabric 1



Fabric 2



FWI



MWS

Abbreviation

FWI : Fusible Woven interfacing

MWS : Mid-Weight Stabilizer

RS : Right Side

WS : Wrong side

Cutting

Print and tile the templates as instructed in the video tutorial.

Panel 1 (main body exterior)

Using template 1 cut 2x from Fabric 1; cut 1x from FWI - for the front exterior

Using template 2 cut 1x from the MWS - for the back exterior

Panel 2 (main body interior)

Using template 1 cut 2x from Fabric 2

Using template 2 cut 1x from the MWS - for the front interior

Panel 3 (front exterior pocket)

Cut 1x each from fabric 1 & 2: 7" x 8" (18 x 20.5 cm)

Cut 1x from FWI : 6" x 7" (15 x 18 cm) - for the exterior fabric

Panel 4 (pocket flap)

Cut 2x from fabric 1: 6 1/2" x 5" (16.5 x 12.7 cm)

Cut 1x from MWS : 5 1/2" x 4" (14 x 10 cm)

Panel 5 (front interior slip pocket)

Cut 1x from Fabric 2 : 9" x 14" (23 x 35.5 cm)

Panel 6 (back interior - zipper pocket)

Cut 1x from Fabric 2 : 7" x 13" (18 x 33 cm)



watch the video tutorial
<https://youtu.be/7DUd3jMGO3A>

Panel 7 (strap holder)

Cut 2x from fabric 1 : 3 1/2" x 5" (9 x 12.7cm)

Cut 1x from FWI : 2 1/2" x 4" (6.5 x 10cm)

Panel 8 (zipper panels)

Cut 2x each from fabric 1 & 2 : 16" x 2" (40.5 x 5 cm)

Cut 2x from the FWI : 15" x 2" (38 x 5 cm) - for the exterior fabric

Zipper Tabs

Cut 2x from fabric 1 : 2" x 1 1/2" (5 x 3.8 cm)

Panel 9 (bottom panels)

Cut 1x each from fabric 1 & 2 : 18" x 3 1/2" (48 x 9 cm)

Cut 1x from the FWI : 17" x 3 1/2" (43 x 9 cm) - for the exterior fabric


Cut 1x from MWS : 16" x 2 1/2" (40.5 x 6.5 cm) - for the interior fabric

D-ring tabs

Cut 2x from the webbing 2" (5cm) long

Strap

Cut 50" (127 cm) long webbing

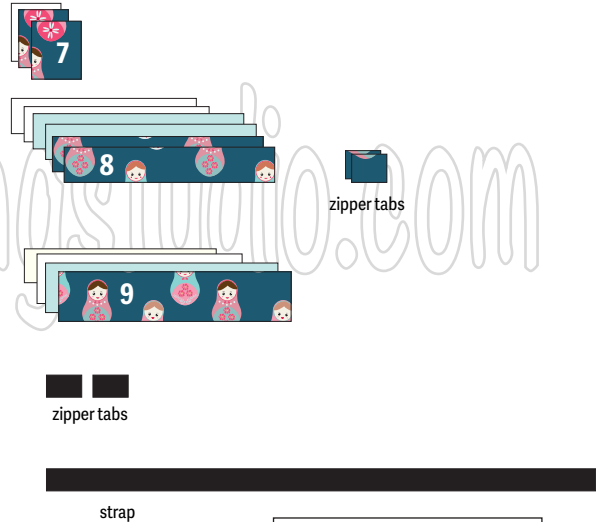

watch the video tutorial
<https://youtu.be/7DUd3jMGO3A>

Directions

Seam allowances are 3/8" (1cm) unless otherwise stated.

Please watch the Full Video Tutorial for thorough demonstration.

Preparation


1. Fuse the FWI to the wrong side of panel 1 (front), 3 (exterior fabric), 7 (exterior fabric), 8 (exterior fabric), and 9 exterior fabric. Center the position.
2. Fuse the MWS to the wrong side of panel 1 (back), 2 (front), 4 (exterior fabric), and 9 (interior fabric). Center the position.

Bag Exterior & Interior

3. Sew and install the front exterior pocket.
4. Sew and install the front interior slip pocket
5. Sew and install the back interior zipper pocket.

Zipper pocket tutorial https://youtu.be/EYT_iFmBEFA?t=310

6. Sew and install the strap holder.
7. Install the d-ring tabs.
8. With the WS facing, sew the front exterior and the front interior with 1/4" (6mm) seam allowance.
9. With the WS facing, sew the back exterior and the back interior with 1/4" (6mm) seam allowance

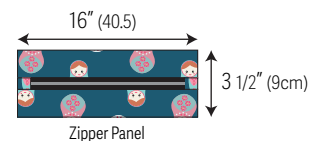

10. Sew the zipper tabs on the zipper extension tape.
11. Sew the zipper panels.
12. Measure the width of the zipper panel, if necessary trim off the fabric to measure **3 1/2" (9cm)** wide.
13. Sew the bottom panels to the zipper panel.

use 1/4" (6mm) seam allowance when installing the zipper panels

Please watch the video tutorial thoroughly for visual presentation, and to avoid any confusion.

Assembling the bag, finishing.

14. With the RS facing baste the zipper/bottom panel to the front panel with some pins, matching all the markings first.
(baste the bottom corners with hand stitching).
15. Sew all around, starting from the zipper area; when you get to the bottom corners, you may need to reduce the seam allowance to 1/4" seam allowance.
16. Sew the back panel the same way.
17. Bind the raw edges as desired.
18. Sew the strap, and your bag is done.

You may sell the bag that you make from this pattern. Permission given for small home based business.

©Copyright 2023 YoanSewingStudio. All Rights Reserved. Duplication of any kind is prohibited.