

Crossbody Cellphone Purse Project

www.yoansewingstudio.com

www.youtube.com/yoansewingstudio



Supplies

Main Fabric : 1 Fat Quarter or 1/4 yard of fabric*

Lining Fabric : 1 Fat Quarter or 1/4 yard of fabric*

Recommended Fabric : Cotton Quilting, canvas, linen, light denim

*based on regular 44" wide cotton quilting fabric

9" x 14" (23 x 35.6 cm) Fusible Fleece (I use Pellon TP971F) <https://amzn.to/2Zi8wQu>

1/8 yard (20" wide) fusible woven interfacing - Pellon SF 101 <https://amzn.to/346atRJ>

(3) all purpose zipper 1" (2.5cm) wide 8" (20.3 cm) long* <https://amzn.to/2JoXluG>

*you may also use 7" (17.8cm) or 9" (23cm) long zipper

(2) 1/2" (12 mm) d rings <https://amzn.to/2Vcl5KL>

(2) 1/2" (12mm) swivel hook <https://amzn.to/3lmBvdY>

1/2" (12mm) Strap Adjuster <https://amzn.to/37mvMQF>

Tools

Basic sewing notions

Walking foot

Hera Marker (optional)

Polyester thread

Finished purse measurements :

Approx. 4 1/2" x 7 1/2" (11.4 x 19 cm)

Top zipper opening 3 3/4" (9.5cm) wide

Abbreviation

FWI : Fusible woven interfacing

FF : Fusible Fleece



main fabric



lining fabric



FWI



FF

watch the video tutorial :

<https://youtu.be/kmu3IO8s1sE>

Cutting

Front

Panel 1&2

Cut 2x from the main fabric : 5 1/2" x 2" (14 x 5.1 cm)


Cut 2x from the FWI 4 1/2" x 2 (11.4 x 5.1 cm)



FWI 1



FWI 2

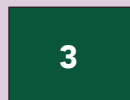

FWI 3

Panel 3

Cut 1x from the main fabric 5 1/2" x 4 1/2" (14 x 11.5 cm)

Cut 1x from the FWI 4 1/2" x 4 1/2" (11.4 x 11.5 cm)


watch the video tutorial :

<https://youtu.be/kmu3IO8s1sE>



Lining Panel 1

Cut 1x from the lining fabric 5 1/2" x 8" (14 x 20.3 cm)

Cut 1x from the FF 4 1/2" x 7" (11.4 x 17.8 cm)

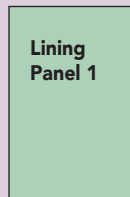

FF
For lining
Panel 1

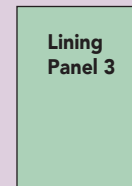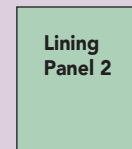

Lining Panel 2

Cut 1x from the lining fabric 5 1/2" x 6" (14 x 15.2 cm)

Lining Panel 3


Cut 1x from the lining fabric 5 1/2" x 7 1/2" (14 x 19 cm)

Back


Back Exterior

cut 1x from the main fabric : 5 1/2" x 8" (14 x 20.3 cm)

cut 1x from the FF 4 1/2" x 7" (11.4 x 17.8 cm)

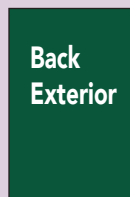

FF
For Back
Exterior

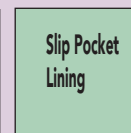

Slip Pocket

Cut 1x each from main & lining fabric : 5 1/2" x 5 1/2" (14 x 14 cm)

Cut 1x from FWI 4 1/2" x 5 1/2" (11.4 x 14 cm)



D Ring Tabs

cut 1x from the main fabric 5" x 2" (12.7 x 5 cm)



Adjustable Strap


cut 1x from the main fabric 50" - 55" x 2" (127-140 cm x 5 cm)

Note : Joining a few strips of fabric may be necessary



Interior

cut 2x from the lining fabric 5 1/2" x 8" (14 x 20.3 cm)

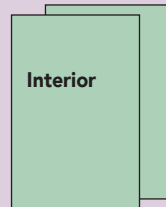

Zipper Tab

cut 1x from the main fabric 3" x 2" (7.6 x 5.1 cm)



Brief Directions

(please refer to the video tutorial for more detailed demonstration)

Seam allowances are 1/4" (6mm) when installing zippers and slip pocket, 3/8" (1cm) when assembling the purse, please pay attention to the directions given in the video.

1. Apply FWI to the following : Panel 1, Panel 2, Panel 3, Slip pocket (center the position)
2. Apply FF to the following : Lining Panel 1, Back exterior (center the position)

Note : You may leave out the FF, if you use heavier fabric (e.g. canvas, denim, tapestry).

3. Sew and install the lower zipper panel
4. Sew and install the upper zipper panel

NOTE : after sewing the front zippers, trim off any excess fabric (so that the front panel will measure 8" tall)

5. Sew the slip pocket, then install that to the right side of the back exterior panel
6. Sew and install the d-ring tabs
7. Sew the adjustable strap, then install the hardware (the swivel hooks, and the strap adjuster)
8. Sew the zipper tab to the zipper end
9. Install the zipper closure
10. Assemble the purse (remember to leave an opening at the bottom of the interior)
11. Turn the purse inside out through the opening
12. Finish your purse by sewing the opening hole close, and attaching the adjustable strap.

You may sell the bag that you made from this pattern, given that it's a home based business.

watch the video tutorial :
<https://youtu.be/kmu3IO8s1sE>